



#67250
TORQUE FIN®

TORQUE IT THE **TORQUE FIN®** WAY!

INSTRUCTIONS FOR PROPER USE OF THE TORQUE FIN®:



1.

1. Use air gun to remove lug nuts.
2. Use air gun to drive lug nuts back on, until snug, using care not to overtighten with air gun.



3. a.

3. Torque lug nuts with torque wrench and **Torque Fin®**.
3. a. Place torque wrench extension through hub hole of **Torque Fin®**.



3. b.

3. b. Install socket on the lug nut, slide **Torque Fin®** on the extension until it touches side wall of the tire.



3. c.

3. c. Use your foot to press **Torque Fin®** against the ground.



3. d.

3. d. Push down, hand-over-hand with light pressure, on end of torque wrench handle. Torque lug nut to manufacturer's specifications.



4.

4. Repeat procedure for all lug nuts.

Remember:
Wheel-Drum and Rim Companies DO NOT acknowledge use of their guns as torque wrenches.

www.ameintl.net

Phone
352.799.1111

Toll Free
1.877.755.4263

2347 Circuit Way
Brooksville, FL 34604

E-Mail
sales@ameintl.net

Fax
352.799.1112